

Wiring Harness - #56008

Installation Guide

Thanks for purchasing your new 2021 – current F-150 wiring harness (#56008)
Installation of your new wiring harness will also require getting under your truck and connecting the harness in the engine bay. Please note this wiring harness will not allow the electronic assisted tailgate feature (tailgate will still work manually).

Kit Elements


Before you start, make sure you have all parts and tools.

- 56008 complete harness/wiring assembly

Useful Tools

- Plastic ties to secure wiring harness


Installation

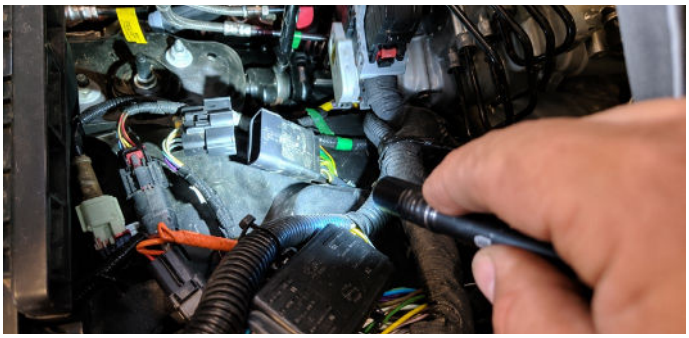

1. Open your hood and disconnect your F-150 main harness connector. Install corner strobe base onto corner bracket with three provided bolts.



2. Attach your Magnum harness to your headache rack and feed the wires down to the ground. Work/snake your new Magnum harness “T-connector” from the bottom of the truck along the frame rail and up into the engine bay.

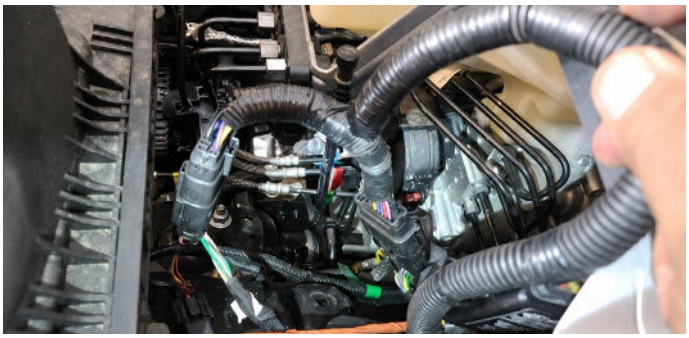

3. Insert your new “T-connector” in-line with the main harness so all connectors are secured.



4. Be sure to ground the harness to finish the installation in the engine bay.

© Aebi Schmidt Group | www.aebi-schmidt.com/usa
Aebi Schmidt North America Inc. | Chilton, WI 53014

All rights reserved. Technical data is subject to change.
Illustrations are not binding. Errors and amendments excepted.

magnum
a brand of aebi schmidt